


INSTALLATION

1. INSTALL HEATED OXYGEN SENSOR

- (a) Using SST, install the 2 heated oxygen sensors onto the exhaust pipe.

SST 09224-00010

Torque: 44 N*m (449 kgf*cm, 33 ft.*lbf)

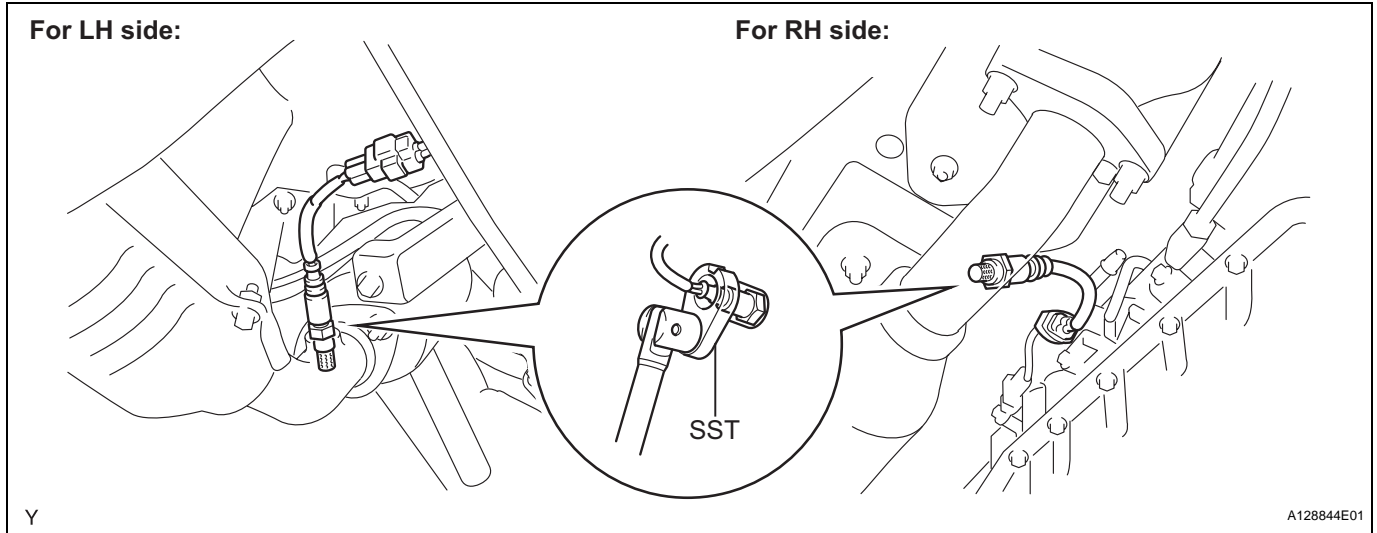

- (b) Connect the 2 heated oxygen sensor connectors.

2. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)