
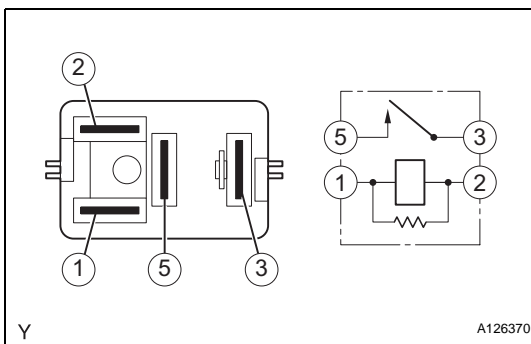


CIRCUIT OPENING RELAY

ON-VEHICLE INSPECTION

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
2. **REMOVE CIRCUIT OPENING RELAY**
 - (a) Remove the relay block cover upper.
 - (b) Remove the circuit opening relay.

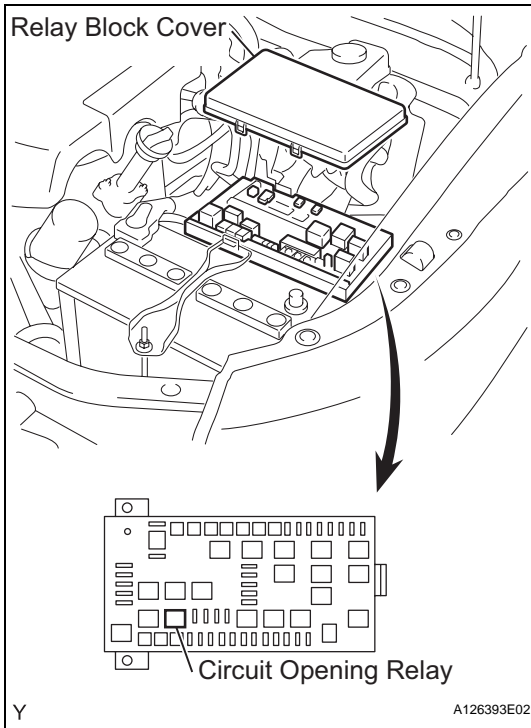

3. **INSPECT CIRCUIT OPENING RELAY**
 - (a) Check the resistance.
 - (1) Using an ohmmeter, measure the resistance between the terminals.

Standard resistance

Tester Connection	Specified Condition
3 - 5	10 k Ω or higher
	Below 1 Ω (Battery voltage applied to terminals 1 and 2)

If the result is not as specified, replace the circuit opening relay.

4. **INSTALL CIRCUIT OPENING RELAY**
 - (a) Install the circuit opening relay.
 - (b) Install the relay block cover upper.
5. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)