



INSTALLATION

1. **INSTALL AMBIENT TEMPERATURE SENSOR**
 - (a) Engage the clamp and install the ambient temperature sensor.
 - (b) Connect the connector.
2. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)