

# PARKING BRAKE SYSTEM

## PROBLEM SYMPTOMS TABLE

**HINT:**

Use the table below to help you find the cause of the problem. The numbers indicate the ranked order of probability of each of the possible causes. Check each part in the order suggested. If necessary, replace these parts.

Symptom	Suspected area	See page
Brake drag	1. Parking brake lever travel (Out of adjustment)	<a href="#">PB-4</a>
	2. Parking brake wire (Sticking)	<a href="#">PB-11</a>
	3. Parking brake shoe clearance (Out of adjustment)	<a href="#">PB-20</a>
	4. Parking brake shoe lining (Cracked or distorted)	<a href="#">PB-18</a>
	5. Tension or return spring (Damaged)	<a href="#">PB-17</a>