

TRANSFER OIL

ON-VEHICLE INSPECTION

1. CHECK TRANSFER OIL

- (a) Remove the case plug (for filler) and gasket.
- (b) Check that the oil level is between 0 to 5.0 mm (0 to 0.20 in.) from the bottom lip of the case plug (for filler) hole.

If the result is not as specified, add transfer oil.

Oil grade:

GL-5

Viscosity:

SAE 75W-90

Standard capacity:

1.4 liter (1.5 US qts, 1.3 Imp. qts)

NOTICE:

- **After changing the oil, drive the vehicle and check the oil level again.**
- **Too much or too little oil will lead to transfer problems.**

- (c) When the oil level is too low, check for oil leakage.
- (d) Install a new gasket into the case plug (for filler) and then tighten the plug.

Torque: 37 N*m (377 kgf*cm, 27 ft.*lbf)

2. ADD TRANSFER OIL

- (a) Remove the case plug (for filler) and gasket.
- (b) Pour oil so that the oil level is between 0 to 5.0 mm (0 to 0.20 in.) from the bottom lip of the case plug (for filler) hole.

NOTICE:

- **When adding oil, pour it slowly.**
- **Add oil a little at a time, waiting several minutes between each addition of oil.**

- (c) Wait approximately 5 minutes and check that the oil level has not changed.

- (d) Install a new gasket and the case plug (for filler).

Torque: 37 N*m (377 kgf*cm, 27 ft.*lbf)

