

# MAGNETIC CLUTCH RELAY

## ON-VEHICLE INSPECTION


### 1. INSPECT MAGNET CLUTCH RELAY

- (a) Check the resistance.
  - (1) Using an ohmmeter, measure the resistance between the terminals.

**Standard resistance**

Tester Connection	Specified Condition
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (Apply battery voltage to terminals 1 and 2)

If the result is not as specified, replace the relay.

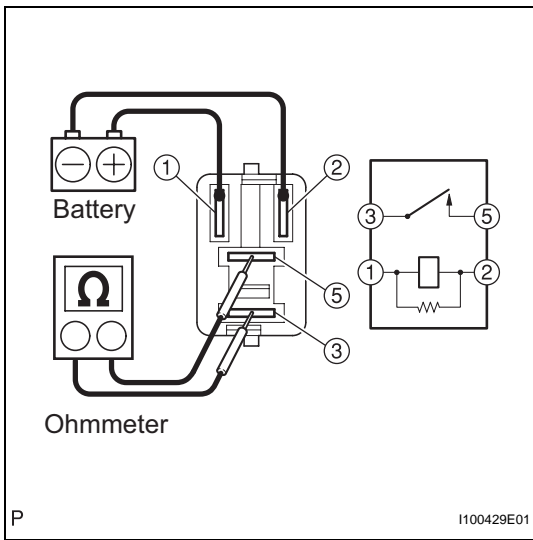

P

1100429E01