


REAR BRAKE COMPONENTS

BR

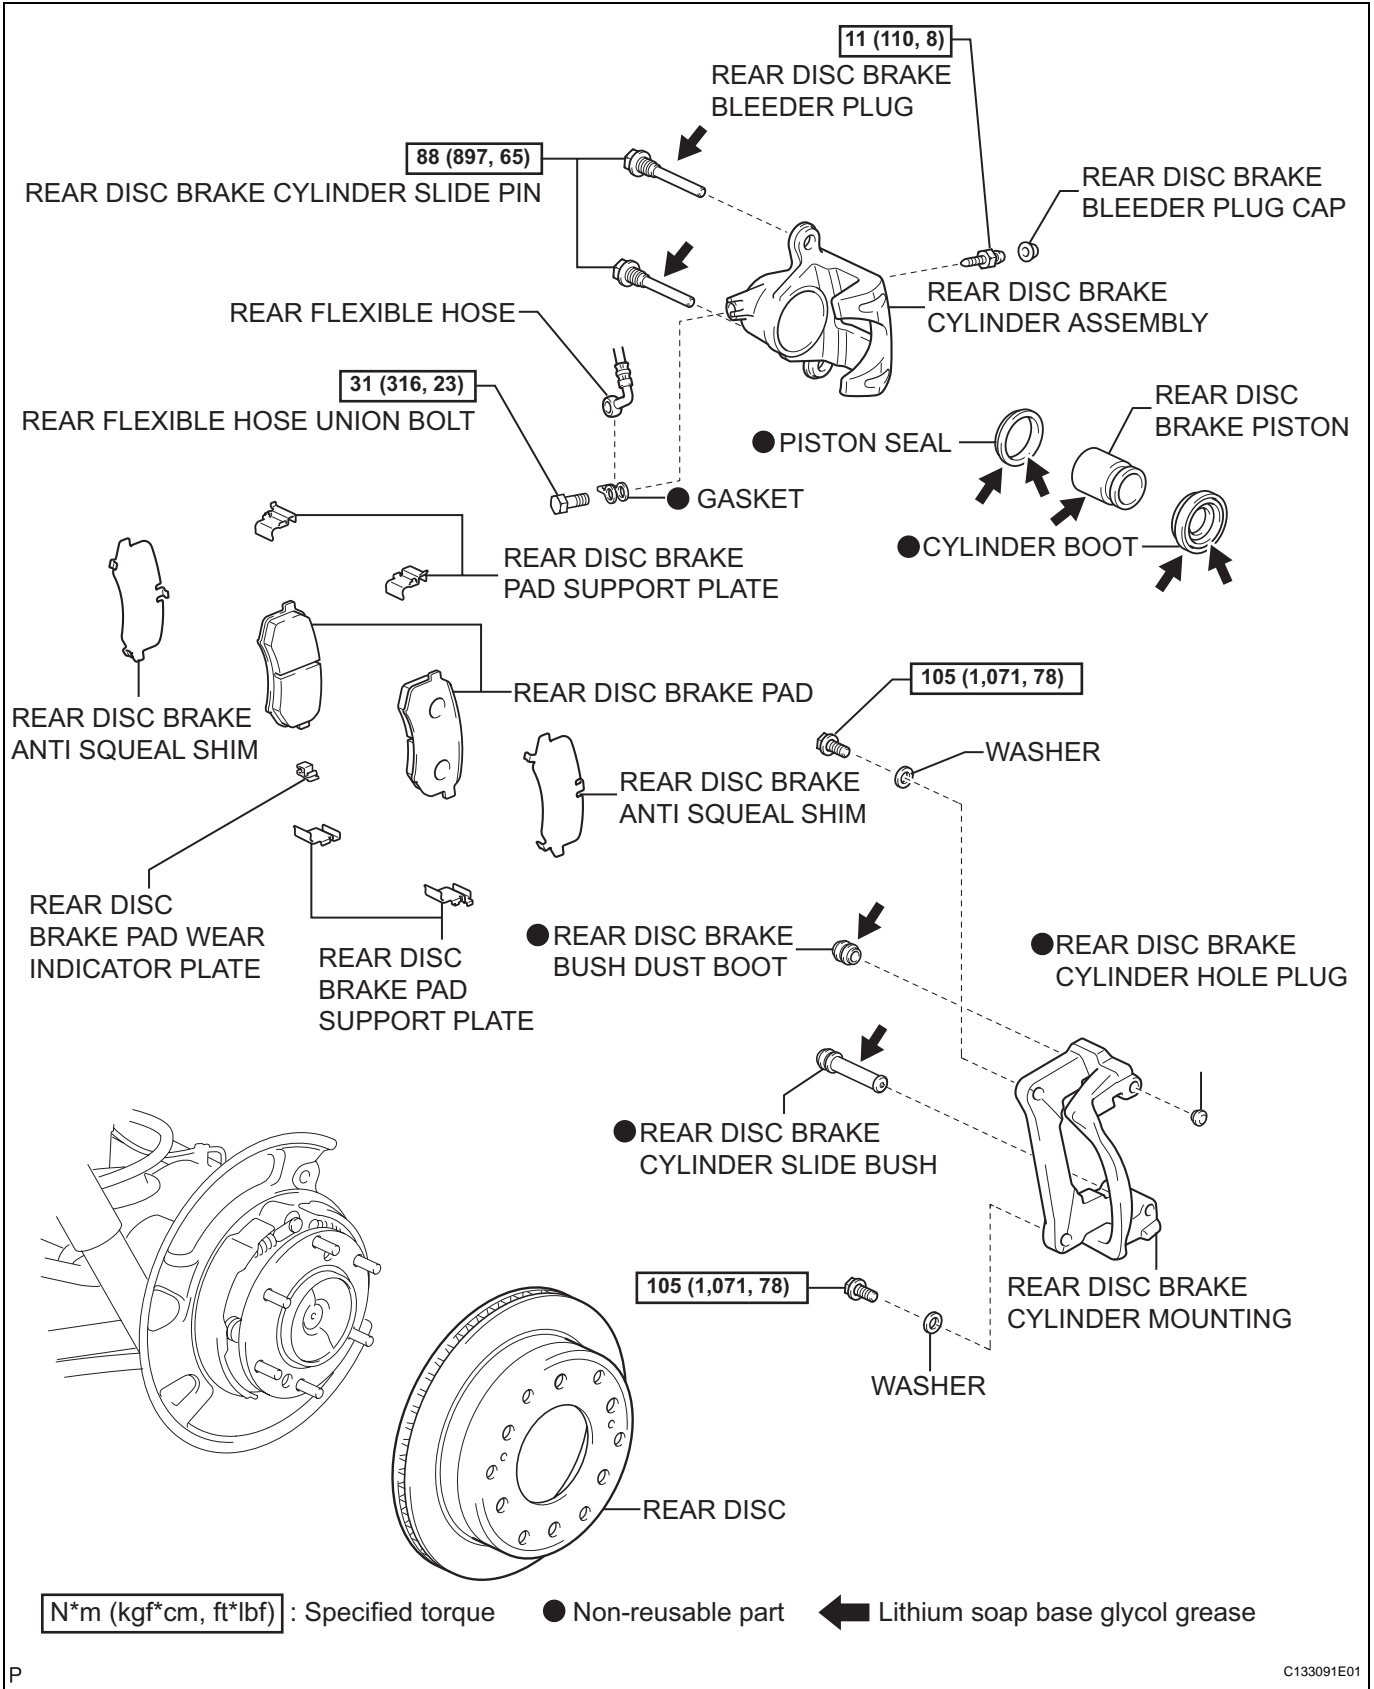

REMOVAL

1. REMOVE REAR WHEEL

2. DRAIN BRAKE FLUID

NOTICE:



Immediately wash off any brake fluid that comes into contact with any painted surfaces.

3. SEPARATE REAR FLEXIBLE HOSE

- (a) Remove the union bolt and gasket and separate the flexible hose from the disc brake cylinder.

HINT:

Use a container to collect the brake fluid as it drains out.

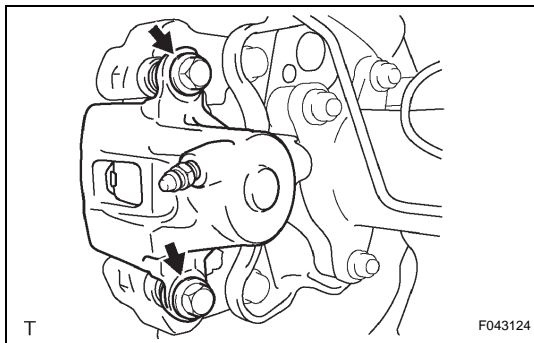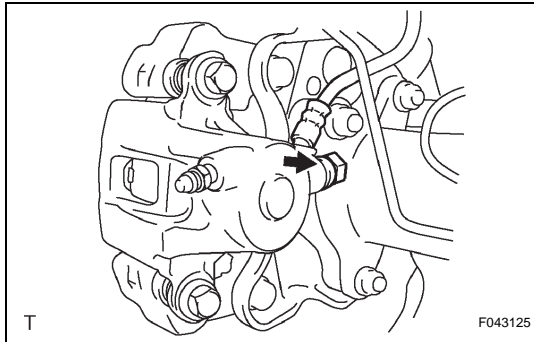

4. REMOVE REAR DISC BRAKE CYLINDER ASSEMBLY

- (a) Remove the 2 slide pins and remove the disc brake cylinder from the disc brake cylinder mounting.

5. REMOVE REAR DISC BRAKE PAD

- (a) Remove the 2 disc brake pads with anti squeal shim from the disc brake cylinder mounting.

6. REMOVE REAR DISC BRAKE ANTI SQUEAL SHIM

- (a) Remove the 2 anti squeal shims from each brake pad.

7. REMOVE REAR DISC BRAKE PAD WEAR INDICATOR PLATE

- (a) Remove the indicator plate from the inner side of the brake pad.

8. REMOVE REAR DISC BRAKE PAD SUPPORT PLATE

- (a) Remove the 4 pad support plates from the disc brake cylinder mounting.

9. REMOVE REAR DISC BRAKE CYLINDER MOUNTING

- (a) Remove the 2 bolts and disc brake cylinder mounting.

10. REMOVE REAR DISC BRAKE CYLINDER SLIDE BUSH

- (a) Remove the slide bush from the disc brake cylinder mounting.

11. REMOVE REAR DISC BRAKE BUSH DUST BOOT

- (a) Remove the dust boot from the disc brake cylinder mounting.

12. REMOVE REAR DISC BRAKE CYLINDER HOLE PLUG

- (a) Remove the hole plug from the disc brake cylinder mounting.

