


## INSTALLATION


### HINT:

The procedure described below is for the LH side. Use the same procedure for both the RH and LH sides, unless otherwise specified.

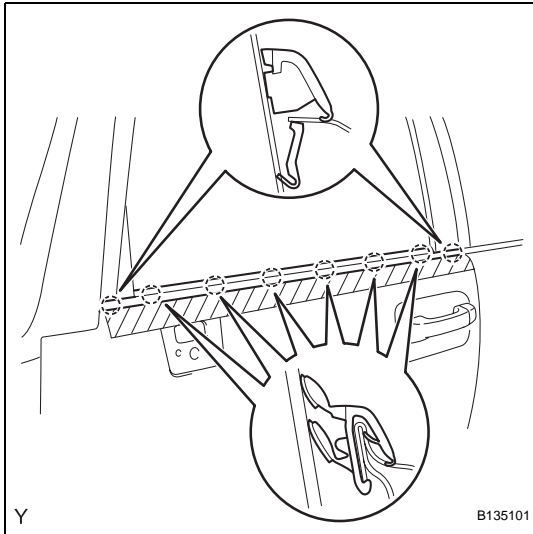


### 1. INSTALL FRONT DOOR GLASS OUTER WEATHERSTRIP ASSEMBLY

- (a) Engage the 8 claws and install a new front door glass outer weatherstrip.

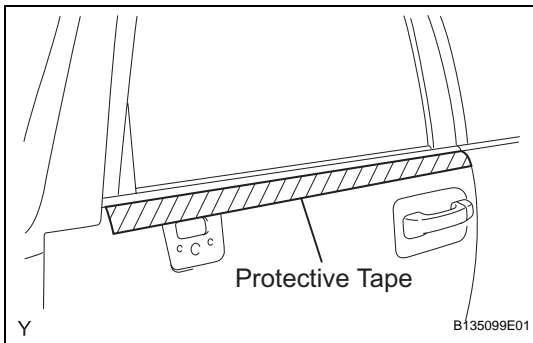

- (b) Remove the protective tape.

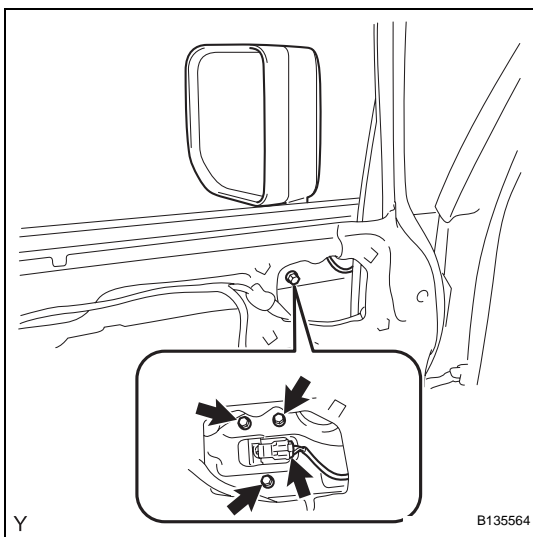

### 2. INSTALL OUTER REAR VIEW MIRROR ASSEMBLY

- (a) Install the outer rear view mirror with the 3 bolts.  
**Torque: 8.0 N\*m (82 kgf\*cm, 71 in.\*lbf)**
- (b) Connect the connector.

### 3. INSTALL FRONT DOOR NO. 2 SERVICE HOLE COVER

#### HINT:

Use the same procedure as for the RH side (See page [ED-24](#) ).

### 4. INSTALL FRONT DOOR TRIM BOARD SUB-ASSEMBLY

#### HINT:

Use the same procedure as for the RH side (See page [ED-24](#) ).

### 5. INSTALL FRONT DOOR ARMREST BASE UPPER PANEL

#### HINT:

Use the same procedure as for the RH side (See page [ED-25](#) ).

**6. CONNECT CABLE TO NEGATIVE BATTERY  
TERMINAL**

**Torque: 3.9 N\*m (40 kgf\*cm, 35 in.\*lbf)**